MM332 INSTALLATION INSTRUCTIONS


3rd Gen Poly Motor Mounts

Tools required:

- Basic Hand Tools and Socket Set
- Jack and Jack Stands

Instructions:

1) **REMOVE THE NEGATIVE BATTERY TERMINAL LEAD TO CUT POWER FOR THE ENTIRE VEHICLE.**
2) Raise the vehicle and support on jack stands on the frame.
3) Depending on how much access you have to remove the nuts on the back side of the motor mounts, you may have to remove the coil springs as shown in IMAGE 1.
4) Using a jack and block of wood, support the motor on the balancer and take weight off the motor mounts.
5) Using a 5/8" and 11/16" wrench and socket, loosen the thru bolt connecting the motor mount to the motor stand.
6) Using a 13mm socket and wrench, remove the three (3) screws holding the motor stand to the block and remove the three (3) nuts and bolts holding the mounts the k-member on each side.

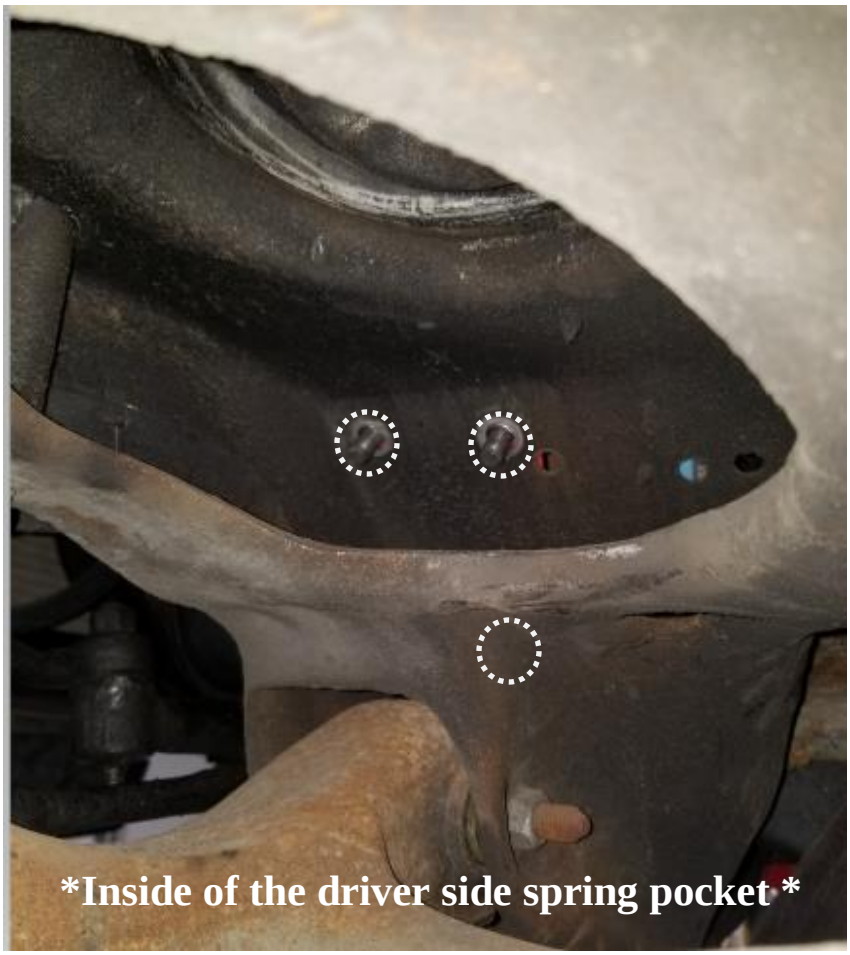

*Inside of the driver side spring pocket *

NOTE: Both the motor mount and the motor stands need to be removed together at the same time.

7) The passenger and driver motor stand look very similar, but are different, please take note of which mount is which. SEE IMAGE 3 and 4.
8) Outside of the vehicle, remove the thru-bolt and install your new motor mount with a thru-bolt the same way it was removed.
9) Re-install the motor mounts and fasten all bolts. Torque to the specs listed below.


This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.

MM332 INSTALLATION INSTRUCTIONS


3rd Gen Poly Motor Mounts

Torque Specs:

- Motor Stand to Block – 40ftlbs
- Motor Mount to K-Member – 40ftlbs
- Motor Mount to Motor Stand Thru Bolt – 55ftlbs

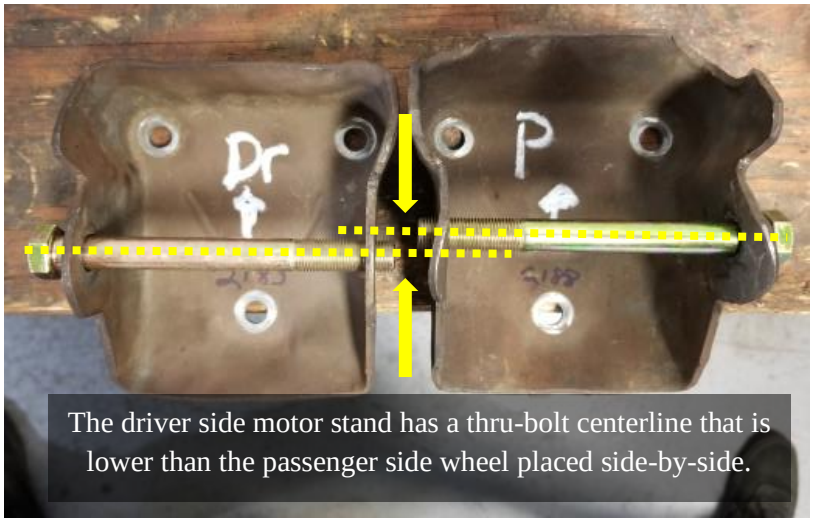

The driver side motor stand has a thru-bolt centerline that is lower than the passenger side wheel placed side-by-side.

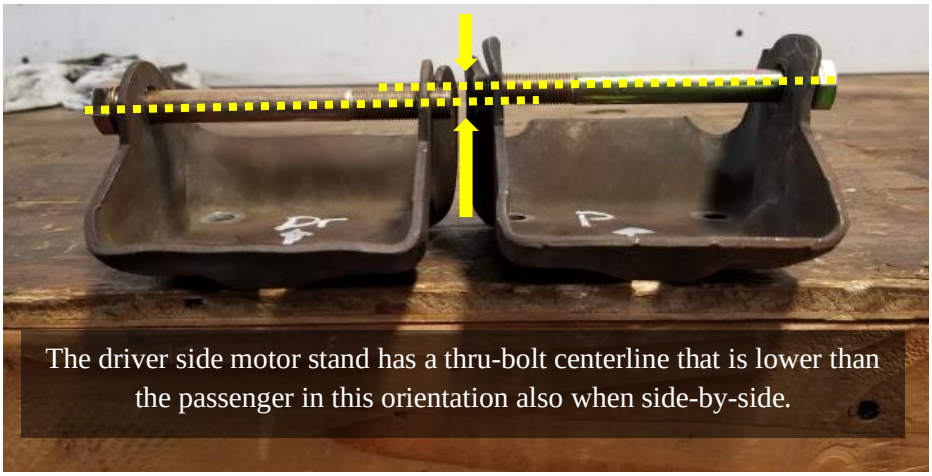

The driver side motor stand has a thru-bolt centerline that is lower than the passenger in this orientation also when side-by-side.

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.

MM332 INSTALLATION INSTRUCTIONS

3rd Gen Poly Motor Mounts

Attention: Polyurethane and Delrin bushings must be properly lubricated with a full synthetic grease only

A full synthetic grease must be used to lubricate the inner sleeve via the grease fitting, contact points such as the outside faces of the polyurethane bushing must also be greased. We recommend Green Grease/Super Lube full synthetic grease for best results.





Do not install bushings dry. Lack of proper lubrication may cause squeaking, binding, premature wear, reduced performance, or damage to the bushings and related components. Bushings should be inspected and re-greased as needed, especially in harsh driving conditions or high-use applications.

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.